# Contents

nonto	
<ul> <li>1 Device Ov</li> </ul>	anview
• 2 Key Featu	1 E310
◆ 2.	2 E312
	3 E313
	oard Specifications
	1 E31x MIMO XCVR board
	2 Tuning
	3 Gains
◆ 0 ▲ 3	4 LO lock status
	5 Filter and Antenna Switches
◆ 0 ▲ 3	6 Side A Filter and Antenna Switches
	7 Side B Filter and Antenna Switches
<ul> <li>4 RF Specifi</li> </ul>	
	1 RF Performance
	2 Input Power Levels
	Specifications
♦ 5.	1 E310
	2 E312
	3 E313
<ul> <li>6 Physical S</li> </ul>	
♦ 6.	1 Dimensions
	◊ 6.1.1 E310
	♦ 6.1.2 E312
	♦ 6.1.3 E313
♦ 6.1	2 Weight
	♦ 6.2.1 E310
	♦ 6.2.2 E312
	♦ 6.2.3 E313
♦ 6.	3 Drawings
	♦ 6.3.1 E310
	♦ 6.3.2 E312
	◊ 6.3.3 E313
♦ 6.	4 CAD/STP Models
	◊ 6.4.1 E310
	♦ 6.4.2 E310 Enclosure
	◊ 6.4.3 E312
	◊ 6.4.4 E313
	ental Specifications
	1 Operating Temperature Range
	2 Operating Humidity Range
<ul> <li>8 Schematic</li> </ul>	
	1 E310
<ul> <li>9 Key Comp</li> </ul>	onent Datasheets
• 10 FPGA	
	0.1 E310/E312/E313
	s and Connectivity
	1.1 Front Panel
	.2 Rear Panel
♦ 11	1.3 GPIO
	♦ 11.3.1 Power on state
	♦ 11.3.2 E31x GPIO Connector / Cable Options
	.4 Audio
<ul> <li>12 Certification</li> </ul>	
	2.1 RoHS 2.2 China RoHS
<ul> <li>13 Certification</li> </ul>	
<ul> <li>14 SD Card</li> <li>15 WiFi Net</li> </ul>	work Connectivity
	5.1 Compiling Wireless Drivers
<ul> <li>16 Additional</li> </ul>	
	5.1 Application Notes
	5.2 Third-party Resources
• 17 Download	
	nbedded Series FAQ
	3.1 General USRP E31x Questions
▼ 10	

- ◆ 18.2 USRP E313 Questions

The USRP E31x offers a portable stand-alone SDR platform designed for field deployment. The flexible 2x2 MIMO AD9361 transceiver from Analog Devices provides up to 56 MHz of instantaneous bandwidth and spans frequencies from 70 MHz ? 6 GHz to cover multiple bands of interest.

- Xilinx Zynq 7020 SoC: 7 Series FPGA with ARM Cortex A9 667 MHz (SG1) or 866 MHz (SG3) dual-core processor
  Analog Devices AD9361 RFIC direct-conversion transceiver
  Frequency range: 70 MHz 6 GHz
  Up to 56 MHz of instantaneous bandwidth
  2x2 MIMO transceiver
  Up to 10 MS/s sample data transfer rate to ARM processor
  RX, TX filter banks
  Integrated GPS receiver
  9-axis inertial measurement unit
  RF Network on Chip (RFNoC?) FPGA development framework support







 Battery Operated
 Xilinx Zynq 7020 SoC: 7 Series FPGA with ARM Cortex A9 866 MHz dual-core processor

- Rugged and weatherproof for outdoor deployment
  Fully assembled IP67-rated enclosure with USRP E310 inside
  Extensive environmental testing
  Power over Ethernet (PoE) with surge and lightning protection
  Xilinx Zynq 7020 SoC: 7 Series FPGA with ARM Cortex A9 866 MHz dual-core processor processor

The USRP E31x MIMO XCVR daughterboard features an integrated MIMO capable RF frontend.

The RF frontend has individually tunable receive and transmit chains. Both transmit and receive can be used in a MIMO configuration. For the MIMO case, both receive frontends share the RX LO, and both transmit frontends share the TX LO. Each LO is tunable between 50 MHz and 6 GHz.

All frontends have individual analog gain controls. The receive frontends have 76 dB of available gain; and the transmit frontends have 89.8 dB of available gain. Gain settings are application specific, but it is recommended that users consider using at least half of the available gain to get reasonable dynamic range.

The frontends provide a lo-locked sensor that can be queried through the UHD API.

The transmit and receive filter banks uses switches to select between the available filters. These paths are also dependent on the antenna switch settings. Incorrectly setting the switches generally results in attenuated input / output power. Receive filters are band pass (series high & low pass filters), transmit filters are low pass.

Source code related to controlling the filter band and antenna switches resides in e300\_impl.c. Specifically, refer to methods e300\_impl::\_update\_bandsel, e300\_impl::\_update\_atrs, e300\_impl::\_update\_gpio, and e300\_impl::\_update\_enables. Generally, these methods set the switches depending on the state of transmit and receive streams.

The following sections provide switch setting tables for antenna and filter selection for frontends A & B receive and transmit paths. For futher details refer to the schematics.

Note: X = don't care, T = If full duplex, set bits according to transmit table, otherwise don't care. Filter range A ? B will be selected if A <= freq < B.

Receive	

RX Port	RX Filter (MHz)	VCTXRX2_V1,V2	VCRX2_V1,V2	RX2_BANDSEL[2:0]	RX2B_BANDSEL[1:0]	RX2C_BANDSEL[1:0]
TRX-A	< 450	01	10	101	XX	01
TRX-A	450 - 700	01	10	011	XX	11
TRX-A	700 – 1200	01	10	001	XX	10
TRX-A	1200 - 1800	01	10	000	01	XX
TRX-A	1800 – 2350	01	10	010	11	XX
TRX-A	2350 - 2600	01	10	100	10	XX
TRX-A	2600 - 6000	01	01	XXX	XX	XX
RX2-A	70 – 450	TT	01	101	XX	01
RX2-A	450 - 700	TT	01	011	XX	11
RX2-A	700 – 1200	TT	01	001	XX	10
RX2-A	1200 - 1800	TT	01	000	01	XX
RX2-A	1800 – 2350	TT	01	010	11	XX
RX2-A	2350 - 2600	TT	01	100	10	XX
RX2-A	>= 2600	TT	10	XXX	XX	XX
Transmit						
TX Port	TX Filter (MHz)	VCTXRX2_V1,V	2 TX_ENABLE	2A,2B TX_BANDSE	L[2:0]	
TRX-A	< 117.7	10	01	111		
TRX-A	117.7 – 178.2	10	01	110		
TRX-A	178.2 – 284.3	10	01	101		
TRX-A	284.3 - 453.7	10	01	100		
TRX-A	453.7 – 723.8	10	01	011		
TRX-A	723.8 – 1154.9	10	01	010		

TRX-A >= 2940.0 XXX Note: Although the transmit filters are low pass, this table describes UHD's tuning range for selecting each filter path. The table also includes the required transmit enable state.

001

000

Note: X = don't care, T = If full duplex, set bits according to transmit table, otherwise don't care. Filter range A ? B will be selected if A <= freq < B.

## Receive

TRX-A 1154.9-1842.6 10

TRX-A 1842.6-2940.0 10

11

RX Port	RX Filter (MHz)	VCTXRX1_V1,V2	VCRX1_V1,V2	RX1_BANDSEL[2:0]	RX1B_BANDSEL[1:0]	RX1C_BANDSEL[1:0]
TRX-B	< 450	10	01	100	XX	10
TRX-B	450 - 700	10	01	010	XX	11
TRX-B	700 – 1200	10	01	000	XX	01
TRX-B	1200 - 1800	10	01	001	10	XX
TRX-B	1800 – 2350	10	01	011	11	XX
TRX-B	2350 - 2600	10	01	101	01	XX
TRX-B	2600 - 6000	10	10	XXX	XX	XX
RX2-B	70 – 450	TT	10	100	XX	10
RX2-B	450 – 700	TT	10	010	XX	11
RX2-B	700 – 1200	TT	10	000	XX	01
RX2-B	1200 - 1800	TT	10	001	10	XX
RX2-B	1800 – 2350	TT	10	011	11	XX
RX2-B	2350 - 2600	TT	10	101	01	XX
RX2-B	>= 2600	TT	01	XXX	XX	XX
Transmit						

TX Port	TX Filter (MHz)	VCTXRX1_V1,V2	TX_ENABLE1A,1B	TX1_BANDSEL[2:0]
TRX-B	< 117.7	00	01	111
TRX-B	117.7 – 178.2	00	01	110

01

01

10

TRX-B	178.2 – 284.3	00	01	101
TRX-B	284.3 - 453.7	00	01	100
TRX-B	453.7 – 723.8	00	01	011
TRX-B	723.8 – 1154.9	00	01	010
TRX-B	1154.9 – 1842.6	00	01	001
TRX-B	1842.6 – 2940.0	00	01	000
TRX-B	>= 2940.0	11	10	XXX

Note: Although the transmit filters are low pass, the following table describes UHD's tuning range for selecting each filter path. The table also includes the required transmit enable states.

- SSB/LO Suppression -35/50 dBc
  Phase Noise 3.5 GHz 1.0 deg RMS
  Phase Noise 6 GHz 1.5 deg RMS
  Power Output >10dBm
  IIP3 (@ typ NF) -20dBm
  Typical Noise Figure <8dB</li>

- The maximum input power for the E310/E312/E313 is 0 dBm.
- Ettus Research recommends to always use the latest stable version of UHD
- Required version on the host computer must match what is running on the E31x
- Current Hardware Revision: 1
- Minimum version of UHD required: 3.8.0
- Current Hardware Revision: 1
- Minimum version of UHD required: 3.8.5
- Current Hardware Revision: 1
- Minimum version of UHD required: 3.8.0
- 133 x 68 x 26.4 mm
- 133 x 68.2 x 31.8 mm
- 186 x 280 x 106 mm
- 375 g
- 446 g
- 2.5 kg
- Media:E310\_Dimensional\_Sketches.pdf
- Media:cu e310 motherboard cca.pdf
  Media:cu E310 daughtercard cca.pdf
- Media:cu usrp-e310.pdf
- Media:cu e312 motherboard cca.pdf
  Media:cu e312 daughtercard cca.pdf
  Media:cu ettus-e312.pdf

- Media:cu usrp-e313 enclosure.pdf
  Media:USRP E313 Dimension Pole Mount.pdf
  Media:USRP E313 Dimension Surface Mount.pdf
  Media:USRP\_E313\_Mounting\_Accessory\_Assembly\_Guide.pdf
  Media:USRP E313\_USB conduit interface.png
- Motherboard
- Top Cover
- Rear Plate
   Front Plate
- Middle Frame

- Bottom Cover
- Motherboard
  Daughtercard
  Enclosure

- Enclosure
- E310 0-40 °C E312 0-40 °C E313 -40-71 °C
- 10% to 90% non-condensing
- E310 Schematics

E310 DB

E310 Architecture

Part Number	Description	Schematic ID (Page)
	Motherboard	
TXS02612RTWR	SDIO PORT EXPANDER	U23 (2)
XC7Z020-1CLG484CES9919	FPGA	U11 (2,3,4,8,11,13)
Xilinx Zyng Product Page	FPGA	-
USB3340-EZK-TR	ULPI Transceiver	U33 (5)
AK4571VQP	Audio CODEC	U30 (6)
FT230XQ-R	UART Interface	U32 (6)
88E1512	Gigabit Ethernet Transceiver	U13 (7)
24LC024/SN	EEPROM	U5 (9)
DS1339,SM	Real-Time Clock	U6 (9)
ADT7408	Temperature Sensor	U8 (9)
MPU-9150	Motion Processing Unit	U3 (9)
InvenSense MPU-9150 Product Page	Motion Processing Unit	U3 (9)
BMP180	Digital pressure sensor	U4 (9)
BQ24192	Adapter Charger	U1 (10)
TPS54478	Step-Down Switcher	U20 (10)
MAX6510HAUT-T	Temperature Switches	U35 (10)
ATTINY88-MU	Microcontroller	U18 (10)
TPS61253YFF	Step-Up Converter	U19 (10)
AMY-6M	GPS Module	U12 (6)
525L20DA40M0000	VCTCXO	-
	Daughterboard	
Part Number	Description	Schematic ID (Page)
AD9361 Product Page	2 x 2 RF Agile Transceiver	U8 (3)
AD9361 Product Page 24AA256	2 x 2 RF Agile Transceiver EEPROM	U8 (3) U15 (2)
AD9361 Product Page 24AA256 TC-1-43A+	2 x 2 RF Agile Transceiver EEPROM RF Transformer	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5) FL32 (5); FL1 (5)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5) FL32 (5); FL1 (5) FL37 (5); FL4 (5)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2250+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter Low Pass Filter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5) FL32 (5); FL1 (5) FL37 (5); FL4 (5) FL23 (6); FL20 (6)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2250+ LFCN-1700+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter Low Pass Filter Low Pass Filter	$\begin{array}{l} U8 \ (3) \\ U15 \ (2) \\ T6 \ (3); T5 \ (3); T4 \ (3) \\ T7 \ (3); T10 \ (3); T1 \ (3) \\ U19 \ (4) \\ U17 \ (4); U18 \ (4) \\ U12 \ (5); U4 \ (5) \\ U13 \ (5); U3 \ (5); U16 \ (5); U2 \ (5); U10 \ (6); U5 \ (6) \\ U11 \ (6); U9 \ (6); U6 \ (6); U7 \ (6); SW4 \ (7); SW1 \ (7) \\ U14 \ (5); U1 \ (5) \\ FL32 \ (5); FL1 \ (5) \\ FL33 \ (6); FL20 \ (6) \\ FL40 \ (5); FL2 \ (5) \end{array}$
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2250+ LFCN-1700+ LFCN-1575+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter Low Pass Filter Low Pass Filter Low Pass Filter Low Pass Filter Low Pass Filter	$\begin{array}{l} U8 \ (3) \\ U15 \ (2) \\ T6 \ (3); T5 \ (3); T4 \ (3) \\ T7 \ (3); T10 \ (3); T1 \ (3) \\ U19 \ (4) \\ U17 \ (4); U18 \ (4) \\ U12 \ (5); U4 \ (5) \\ U13 \ (5); U3 \ (5); U16 \ (5); U2 \ (5); U10 \ (6); U5 \ (6) \\ U11 \ (6); U9 \ (6); U6 \ (6); U7 \ (6); SW4 \ (7); SW1 \ (7) \\ U14 \ (5); U1 \ (5) \\ FL32 \ (5); FL4 \ (5) \\ FL23 \ (6); FL20 \ (6) \\ FL40 \ (5); FL2 \ (5) \\ FL25 \ (6); FL17 \ (6) \end{array}$
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2250+ LFCN-1700+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter Low Pass Filter Low Pass Filter	$\begin{array}{l} U8 \ (3) \\ U15 \ (2) \\ T6 \ (3); T5 \ (3); T4 \ (3) \\ T7 \ (3); T10 \ (3); T1 \ (3) \\ U19 \ (4) \\ U17 \ (4); U18 \ (4) \\ U12 \ (5); U4 \ (5) \\ U13 \ (5); U3 \ (5); U16 \ (5); U2 \ (5); U10 \ (6); U5 \ (6) \\ U11 \ (6); U9 \ (6); U6 \ (6); U7 \ (6); SW4 \ (7); SW1 \ (7) \\ U14 \ (5); U1 \ (5) \\ FL32 \ (5); FL1 \ (5) \\ FL32 \ (5); FL4 \ (5) \\ FL23 \ (6); FL20 \ (6) \\ FL40 \ (5); FL2 \ (5) \\ FL25 \ (6); FL17 \ (6) \\ FL33 \ (5); FL9 \ (5); FL27 \ (6); FL15 \ (6) \end{array}$
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2750+ LFCN-2750+ LFCN-1700+ LFCN-1575+ LFCN-1000+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5) FL32 (5); FL1 (5) FL37 (5); FL4 (5) FL23 (6); FL20 (6) FL40 (5); FL2 (5) FL25 (6); FL17 (6) FL33 (5); FL9 (5); FL27 (6); FL15 (6) FL36 (5); FL5 (5)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2750+ LFCN-2250+ LFCN-1700+ LFCN-1575+ LFCN-1000+ LFCN-575+ LFCN-530+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5) FL32 (5); FL1 (5) FL37 (5); FL4 (5) FL23 (6); FL20 (6) FL40 (5); FL2 (5) FL25 (6); FL17 (6) FL33 (5); FL9 (5); FL27 (6); FL15 (6) FL36 (5); FL5 (5) FL29 (6); FL13 (6)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2250+ LFCN-1700+ LFCN-1575+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5) FL32 (5); FL1 (5) FL33 (5); FL2 (5) FL23 (6); FL20 (6) FL40 (5); FL2 (5) FL25 (6); FL17 (6) FL33 (5); FL9 (5); FL27 (6); FL15 (6) FL36 (5); FL5 (5) FL29 (6); FL13 (6) FL38 (5); FL3 (5); FL30 (6); FL11 (6)
AD9361 Product Page 24AA256 TC-1-43A+ TC1-1-13M+ TPS62140 ADP1753ACPZ-R7 SGA-4563Z SKY13418-485LF SKY13373-460LF MGA-81563 LFCN-5850+ LFCN-2750+ LFCN-2750+ LFCN-1700+ LFCN-1575+ LFCN-1575+ LFCN-530+ LFCN-530+ LFCN-400+	2 x 2 RF Agile Transceiver EEPROM RF Transformer RF Transformer Step-Down Converter Linear Regulator MMIC AMPLIFIER Antenna Switch SP3T Switch Amplifier Low Pass Filter Low Pass Filter	U8 (3) U15 (2) T6 (3); T5 (3); T4 (3) T7 (3); T10 (3); T1 (3) U19 (4) U17 (4); U18 (4) U12 (5); U4 (5) U13 (5); U3 (5); U16 (5); U2 (5); U10 (6); U5 (6) U11 (6); U9 (6); U6 (6); U7 (6); SW4 (7); SW1 (7) U14 (5); U1 (5) FL32 (5); FL1 (5) FL37 (5); FL4 (5) FL23 (6); FL20 (6) FL40 (5); FL2 (5) FL25 (6); FL17 (6) FL33 (5); FL9 (5); FL27 (6); FL15 (6) FL36 (5); FL5 (5) FL29 (6); FL13 (6)

LFCN-80+	Low Pass Filter	FL35 (5); FL7 (5)
HFCN-1600+	High Pass Filter	FL22 (6); FL19 (6)
HFCN-1100+	High Pass Filter	FL24 (6); FL16 (6)
HFCN-650+	High Pass Filter	FL26 (6); FL14 (6)
HFCN-440+	High Pass Filter	FL28 (6); FL12 (6)
BFCN-2435+	Bandpass Filter	FL21 (6); FL18 (6)
FDG6301N	Dual N-Channel, Digital FET	Q8 (7); Q5 (7)
HSMS-8202	Mixer Diodes	CR1 (7); CR2 (7); CR3 (7); CR4 (7)
LP5900TL	Linear Regulator	U25 (8)
ADP150AUJZ-3.0	Linear Regulator	U22 (8)
AD5662RBJ	16-Bit nanoDAC	U21 (8)
SN74AUP1T57	Voltage Translator	U27 (8); U28 (8); U29 (8)
Request a detailed whitepaper covering	g features and components from	<b>m</b> info@ettus.com

• Utilization statistics are subject to change between UHD releases. This information is current as of UHD 3.9.4 and was taken directly from Xilinx Vivado 2014.4. However, keep in mind that Vivado 2015.4 is recommended for FPGA design involving this device.

## 1. Slice Logic

+	+	+	++
Site Type	Used	Available	Util%
Slice LUTs   LUT as Logic   LUT as Memory	36203   28108   8095	53200 53200 17400	68.05     52.83     46.52
LUT as Distributed RAM LUT as Shift Register	870 870 1 7225	1/400	40.52
Slice Registers   Register as Flip Flop	36562	106400 106400	34.36
Register as Latch   F7 Muxes	0	106400	0.00
F8 Muxes	125	13300	0.93

## 3. Memory

+	++		++
Site Type	Used	Available	Util%
+	++	+	++
Block RAM Tile	97	140	69.28
RAMB36/FIFO*	90	140	64.28
RAMB36E1 only	90		i i
RAMB18	14	280	5.00
RAMB18E1 only	14		i i


\* Note: Each Block RAM Tile only has one FIFO logic available and therefore can accommodate only one FIFO36E1 or one FIFO18E1. However, if a

#### 4. DSP

+	-+-		+	+	
Site Type		Used	I.	Available   Util%	
+	-+-		+	+	
DSPs		120	I.	220   54.54	
DSP48E1 only	- L	120	Ť.	1 1	
+	-+-		+	+	

- 10/100/1000 BASE-T Ethernet
- Stereo audio out, mono mic in
  Integrated GPS receiver
  Host USB support
  9-axis IMU

- RF A Group
   TX/RX LED: Indicates that data is streaming on the TX/RX channel on frontend side A
  - RX2 LED: Indicates that data is streaming on the RX2 channel on frontend side A
- RF B Group
   TX/RX LED: Indicates
   that data is streaming
   on the TX/RX channel
   on frontend B
   RX2 LED: Indicates
   that data is streaming
  - that data is streaming on the RX2 channel on frontend B
- PWR: Power switch with integrated status LED, for status description see below.

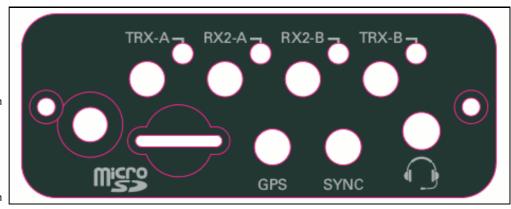


- SYNC: Input port for external
- PPS signal **GPS:** Connection for the GPS antenna
- AUDIO: Audio input / output

The status LED in the power switch indicates the power and charge status. It's behavior is firmware version dependent.

- Version 1 (original E310) Off: Indicates device is
  - - off and not charging Solid Red: Indicates
    - device is charging
      Solid Green: Indicates
    - device is on
    - Fast Blinking Red: Indicates an error code 01 - Low voltage error ◊ 2 - Regulator low voltage error ◊ 3 - FPGA power error ◊ 4 - DRAM power error ◊ 5 - 1.8V rail power error ◊ 6 - 3.3V rail o.ov rail power error ◊7 -Daughterboard / TX power error
      - ◊9-
      - Temperature error
- Version 2 (E312 and upgraded Ê310)
  - Off: Indicates device is off and not charging
     Slow Blinking Green:
  - Indicates device is off
  - and charging
     Fast Blinking Green: Indicates device is on and charging
  - Solid Green: Indicates device is on (and not
  - charging, if E312)
    Solid Orange: Indicates device is on
  - And discharging
     Fast Blinking Orange: Indicates device is on, discharging, and charge is below 10% charge
  - + Fast Blinking Red:
    - Indicates an error code ◊1 - Low voltage error ◊ 2 - Regulator low voltage error ♦3 - FPGA power error ◊ 4 - DRAM power error ◊ 5 - 1.8V rail power error ◊ 6 - 3.3V rail power error ◊7 -, Daughterboard / TX power error ◊8 - Charger error 09 - Charger temperature error ◊ 10 - Battery low error ◊ 11 - Fuel Gauge temperature

error

- 12 Global (case) temperature error
- PWR: Locking connector (Kycon KLDHCX-0202-A-LT) for the USRP-E Series power supply
- 1G ETH: RJ45 port for Ethernet interfaces
- USB: USB 2.0 Port
- SERIAL: Micro USB connection for serial uart console

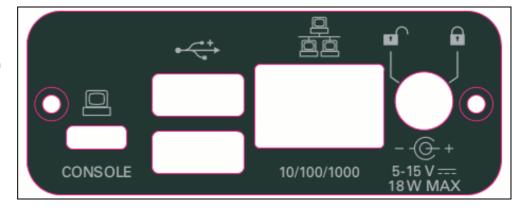

## Pin Mapping

<ul> <li>Pin 1: +3.3V</li> <li>Pin 2: Reserved</li> <li>Pin 3: Data[5]</li> <li>Pin 4:</li> </ul>	1	3	5	7	9
Reserved • Pin 5: Data[4] • Pin 6: Data[0] • Pin 7:	2	4	6	8	10
Data[3] • Pin 8: Data[1] • Pin 9:			J12		
0V • Pin 10: Data[2]					

The hardware power on state and UHD initial state for the front-panel GPIOs is high-Z. For the E3xx, there are no external pull-ups/pull-downs for the GPIO pins, but the FPGAs do have them and they are configured as follows: E3xx: pull-down.

• Please see the E3x0/X3x0 GPIO API for information on configuring and using the GPIO bus.

Crimp connector pins and sockets can be found at the links below:

- Crimp Connector Pins
- Socket


Complete cable assemblies can be found here:

• https://uk.farnell.com/multicomp/cass-0842/cable-assembly-crimp-socket-150mm/dp/2506397

Note: You must modify the the E31x case in order to provide access for the cable to pass through. This modification is not covered under the warranty.

Depending upon your application requirements, a FTDI->UART board such as the Adafruit FT232H board linked below, connected to the USB port provides an option for basic GPIO functionality without any modification to the E31x case.

- https://www.adafruit.com/product/2264
- The E3x0 2.5 mm Audio Jack TRRS pins are assigned as follows: Tip=Mic, Ring1=Right, Ring2=Left, Sleeve=GND.
- The Left/Right audio outputs are compatible with typical low-impedance headphones (16 to 32 Ohms). The Microphone pin provides approximately 2 mA bias at 2.2 V when not suspended. A variety of pin configurations can be found on commonly available headsets, so an adapter may be required.

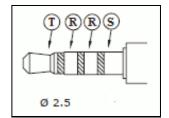

As of December 1st, 2010 all Ettus Research products are RoHS compliant unless otherwise noted. More information can be found at http://ettus.com/legal/rohs-information

Management Methods for Controlling Pollution Caused by Electronic Information Products Regulation

**Chinese Customers** 

National Instruments is in compliance with the Chinese policy on the Restriction of Hazardous Substances (RoHS) used in Electronic Information Products. For more information about the National Instruments China RoHS compliance, visit ni.com/environment/rohs\_china.

Found on the NI Product Certifications lookup tool here.

### http://files.ettus.com/e3xx\_images/

This folder linked above contains SD card images and the SDK (OE cross-compiler build environment) for the USRP E31x. There is a manifest file that shows which packages, and which versions, are included in the OE build within each folder.

The "alpha", "beta", "e3xx-release-001", "e310-release-002", "e3xx-release-3" folders contain older versions which are currently obsolete. We do not suggest that customers use these files. These versions are no longer supported. They are provided here for archival purposes only.

The current version is Release 4, which located in the "e3xx-release-4" folder. We recommend the customers use this version. It is fine if you are already successfully using an older version, but at some point it is recommended that you upgrade to this current version so that you benefit from the latest bug fixes, new features, stability improvements, and other enhancements.

The Release 4 image includes UHD 3.9.2 and GNU Radio 3.7.9, and also includes the corresponding FPGA image file.

Note: An 8 GB SD card is required for the Release 4 image.

The SD card image contains both the FPGA image and the OS for the E31x. The FPGA images are located in the file system of the E31x in the /usr/local/share/uhd/images folder.

There are two SD card image files for each version of the image, which include the text "-dev" and "-demo" in the filename. The "-dev" flavor lacks some graphical packages, such as X Windows and QT, which the "-demo" flavor includes. The two flavors are otherwise functionally equivalent, although the "-demo" flavor takes some additional space on the SD card and some additional memory to run.

The Release 4 image comes in two varieties. The variety that you will need depends on the product number of your E31x, which is printed on the bottom of the device.

For the E310, the product number will be 156333x-01L, where X is a letter from A to Z. For devices where X is A, B, C, D, the images under the "ettus-e3xx-sg1" folder should be used. For devices where X is E or later, the images under the "ettus-e3xx-sg3" folder should be used. You must use the appropriate image for your specific device. The incorrect image will not work, and will only boot as far as the U-Boot boot loader before stopping.

For the E312, the product number will be 140605x-01L, where X is a letter from A to Z. The images under the "ettus-e3xx-sg3" folder should be used for all E312 devices.

You can burn the image to an SD card using either the "dd" or the "bmaptool" tool. Instructions on how to use these tools are at the links below.

- https://files.ettus.com/manual archive/release 003 009 007/html/page usrp e3x0.html#e3x0 upgrade sd card
- https://gnuradio.org/redmine/projects/gnuradio/wiki/Copy\_an\_image\_file\_to\_the\_SD\_card

The SD image files have an \*.xz extension, as they are compressed using the LZMA/LZMA2 compression algorithms. You can uncompress these files with tools such as 7-Zip and the XZ Utils. Please see the links below for further information.

#### 7-Zip

- http://www.7-zip.org/
- https://en.wikipedia.org/wiki/7-Zip

#### **XZ Utils**

- http://tukaani.org/xz/
  https://en.wikipedia.org/wiki/XZ\_Utils

## The folder structure is listed below.

alpha		
		dizzy-test
I	1	<pre>  oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.manifest</pre>
	1	<pre>  oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh</pre>
	1	sdimage-gnuradio-demo.direct.xz
I	1	` sdimage-gnuradio-dev.direct.xz
		fido-rfnoc-test
	1	<pre>  oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.manifest</pre>
	1	<pre>  oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh</pre>
	1	sdimage-gnuradio-demo.direct.xz
	1	sdimage-gnuradio-demo.direct.xz.md5
	1	sdimage-gnuradio-dev.direct.xz
	1	` sdimage-gnuradio-dev.direct.xz.md5
		fido-test
I	1	ettus-e3xx-sg1
I	1	sdimage-gnuradio-demo.direct.xz
I	1	sdimage-gnuradio-demo.direct.xz.md5
I	1	sdimage-gnuradio-dev.direct.xz
I	1	` sdimage-gnuradio-dev.direct.xz.md5
	1	ettus-e3xx-sg3
	1	sdimage-gnuradio-demo.direct.xz
	1	sdimage-gnuradio-demo.direct.xz.md5
	1	sdimage-gnuradio-dev.direct.xz
		` sdimage-gnuradio-dev.direct.xz.md5
		<pre>  oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.manifest</pre>
	1	` oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh
` fosphor-testing		
		fosphor.direct.xz
		<pre>  oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.host.manifest</pre>
		oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh
		<pre>  oecore-x86_64-armv7ahf-vfp-neon-toolchain-nodistro.0.target.manifest</pre>
		sdimage-gnuradio-demo.direct.xz
		sdimage-gnuradio-demo.direct.xz.md5
		sdimage-gnuradio-dev.direct.xz
		` sdimage-gnuradio-dev.direct.xz.md5

|-- dizzv-test l-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.manifest |-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh |-- sdimage-gnuradio-demo.direct.xz -- sdimage-gnuradio-dev.direct.xz -- dizzy-test-wifi -- sdimage-gnuradio-dev.direct.xz -- e310-release-002 |-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.manifest
|-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh |-- sdimage-gnuradio-demo.direct.xz
|-- sdimage-gnuradio-demo.direct.xz.md5sum |-- sdimage-gnuradio-dev.direct.xz
`-- sdimage-gnuradio-dev.direct.xz.md5sum
e3xx-release-001 |-- e300-gnuradio-dev-image-releasel.bz -- nodistro-eglibc-x86\_64-gnuradio-dev-image-armv7ahf-vfp-neon-toolchain-nodistro.0.sh e3xx-release-3 l-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.manifest l-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh l-- sdimage-gnuradio-demo.direct.xz -- sdimage-gnuradio-dev.direct.xz e3xx-release-4 -- ettus-e3xx-sal -- ettus-e3xx-sg1
|-- sdimage-gnuradio-demo.direct.xz
|-- sdimage-gnuradio-demo.direct.xz.md5
|-- sdimage-gnuradio-dev.direct.xz.md5
-- ettus-e3xx-sg3 |-- sdimage-gnuradio-demo.direct.xz
|-- sdimage-gnuradio-demo.direct.xz.md5 |-- sdimage-gnuradio-dev.direct.xz
`-- sdimage-gnuradio-dev.direct.xz.md5 |-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.manifest `-- oecore-x86\_64-armv7ahf-vfp-neon-toolchain-nodistro.0.sh

Below are instructions on setting up a USB WiFi adapter with the E3xx. We have tested the "Edimax EW-7811Un", however many USB based WiFi adapters should be supported.

First verify the USB WiFI adapter is found by running lsusb.

Example output from lsusb for the "Edimax EW-7811Un" WiFi adapter:

Bus 001 Device 003: ID 7392:7811 Edimax Technology Co., Ltd EW-7811Un 802.11n Wireless Adapter [Realtek RTL8188CUS]

If the USB adapter is found, proceed with installation and configuration procedure:

#### 1. Run the command below. Enter the passphrase and hit <Enter>.

wpa\_passphrase <SSID> >> /etc/wpa\_supplicant.conf`

2. In the file /etc/wpa\_supplicant.conf, edit the entry created above to look like the text below (just add what is missing).

```
network={
         ssid="YOUR_SSID"
psk=HASH_VALUE
key_mgmt=WPA-PSK
          proto=RSN WPA
          pairwise=CCMP TKIP
          group=CCMP TKIP
```

#### 3. Run the command:

wpa\_supplicant -B -D nl80211 -i wlan0 -c /etc/wpa\_supplicant.conf

#### 4. Bun the command:

udhcpc -i wlan0

At this time. Ettus Research does not support compiling drivers on the E3xx device. In the Release-4 image there is the drivers for several wifi adapters built-in. Most wireless adapters labeled for the Raspberry-Pi should work with the included drivers.

- Software Development on the E310 and E312
  Resolving Audio Codec Enumeration Issues On The E31x
- Compass Heading Using Magnetometers (Honeywell Application Note)

**FPGA** Images

- FPGA Images Read Me
- **FPGA Resources**
- **UHD Stable Binaries**

UHD Source Code on Github

**Q:** What data rate is supported for continuous sample streaming to a desktop or laptop host-PC? A: Unlike host-based SDRs such as the USRP B, N, and X Series devices, the USRP E Series devices are not intended for continuous streaming of high bandwidth data to a desktop or laptop host-PC. The SDR application runs on an embedded CPU with limited processing capability. Users should leverage the FPGA using tools such as RFNoC to offload compute intensive algorithms that process high bandwidth samples.

**Q: What data rate is supported between FPGA to the ARM processor?** A: Due to the limited performance of the embedded processor, the maximum data rate from the FPGA to ARM cores is approximately 10 MS/s, and will vary with the processing load on the CPU. The AD9631 RFIC is capable of capturing 56 MHz of bandwidth. Processing signals at full bandwidth requires implementing algorithms on the FPGA.

**Q: What is the purpose of the 1 GbE port?** A: The E Series can run a DHCP client on the 1 GigE interface to enable connection to a larger network for remote access by another computer. Power over Ethernet is also supported on the E313.

**Q: Which environmental tests were performed?** A: The USRP E313 is tested against multiple environmental standards to ensure operation in outdoor conditions. These test include ingress protection, temperature, humidity, mechanical shock, random vibration, and altitude. Detailed specifications are provided in the [link data sheet].

#### Q: How do I protect external devices connected to the host USB port? ?

A: A circular conduit interface is provided in the kit. This component has large and small threaded ends. The small end connects to the USB port on the USRP E313. The user will need to connect their own waterproof structure to the large end to protect the USB device. Since requirements for external devices vary greatly, the conduit interface serves as a flexible starting point for users to build their own solution. See the Media:USRP E313 Dimension Pole Mount.pdf of the conduit interface for details.



Q: How do I protect unused ports? A: All ports come with protective end caps that should be left in place on unused ports.

**Q: Why is a DC power supply not included?** A: The RJ45 port supports Power over Ethernet and is intended as the primary power supply option. However, users can still use a DC power supply. Since requirements for supplying DC power in outdoor scenarios can vary greatly, a waterproof sleeve for the DC port is provided as a starting point for users to design their own solution. A waterproof sleeve for the RJ45 port is also provided.

**Q:** Do the RF inputs have lightning protection? A: The DC and PoE power inputs have surge and lightning protection, but the N-type RX/TX inputs and SMA GPS input do not. Users should design antenna lightning protection based on their application requirements.